


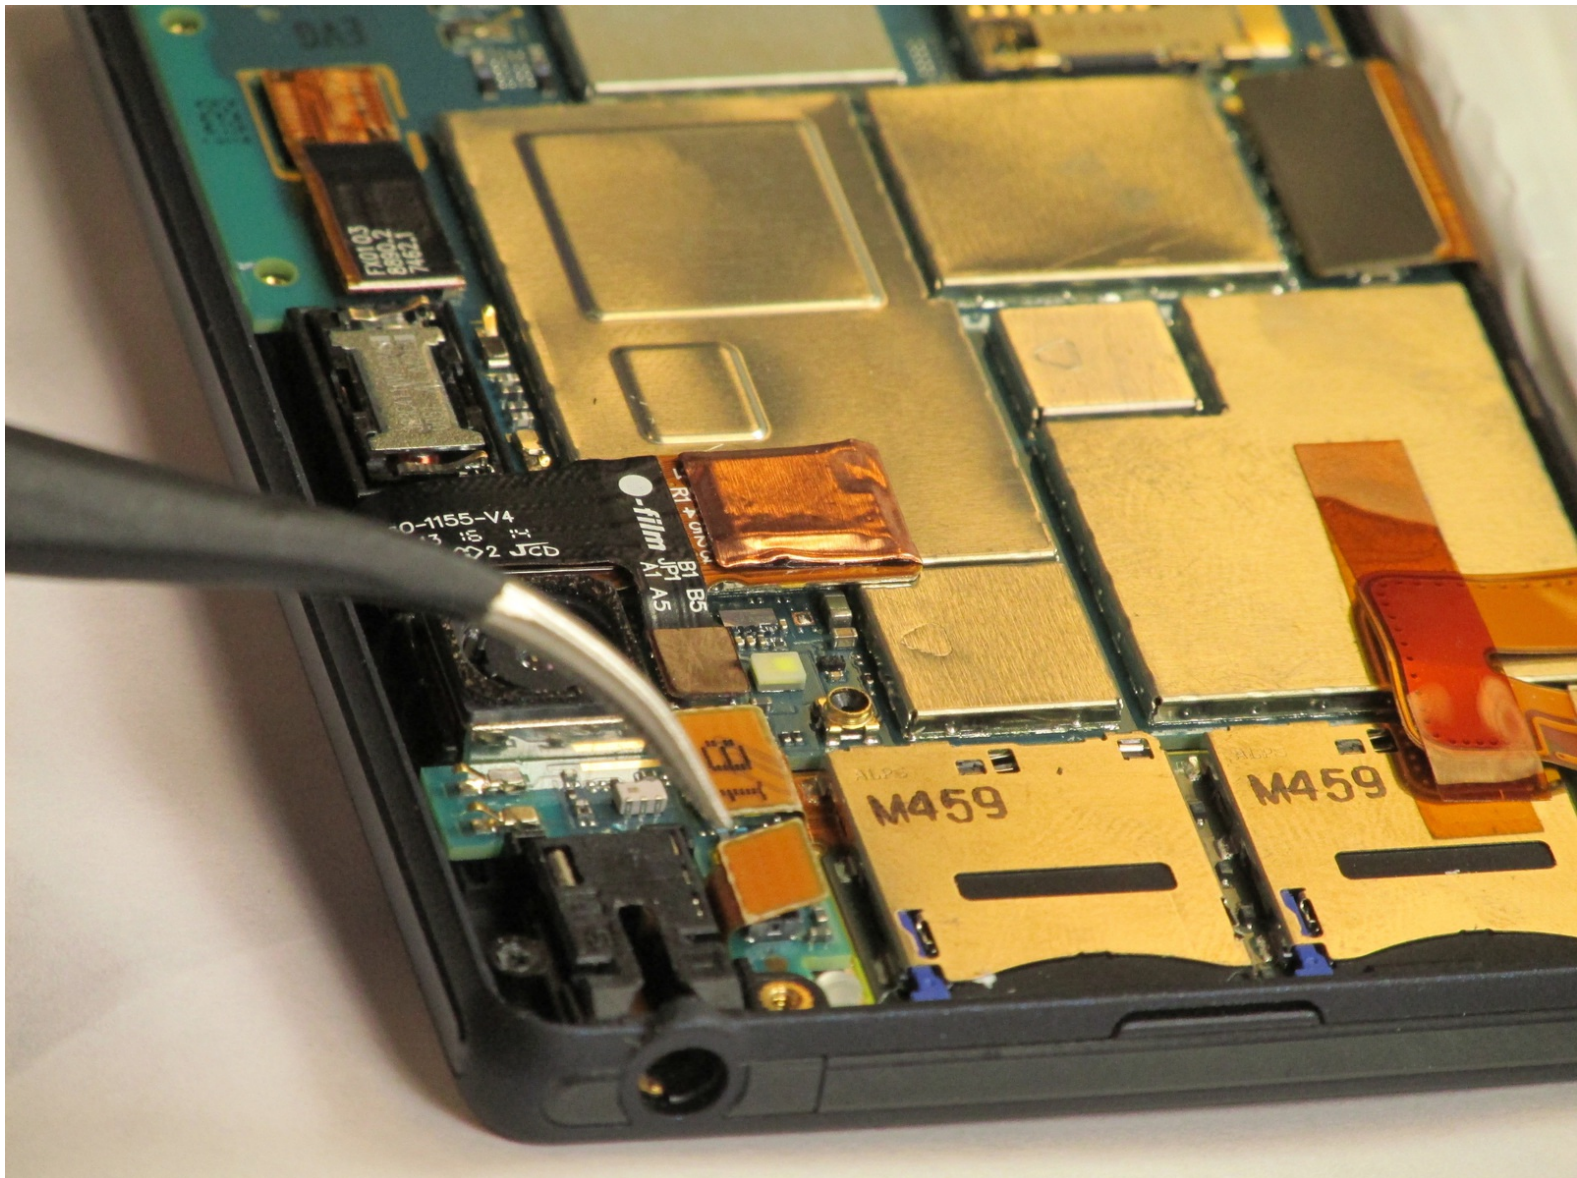

Sony Xperia T2 Ultra Dual Audio Jack Replacement

No audio? Replace the headphone jack!

Written By: Christina Wojaczyk



INTRODUCTION


This guide can be used to replace the headphone jack.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [Tweezers](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Rear Case

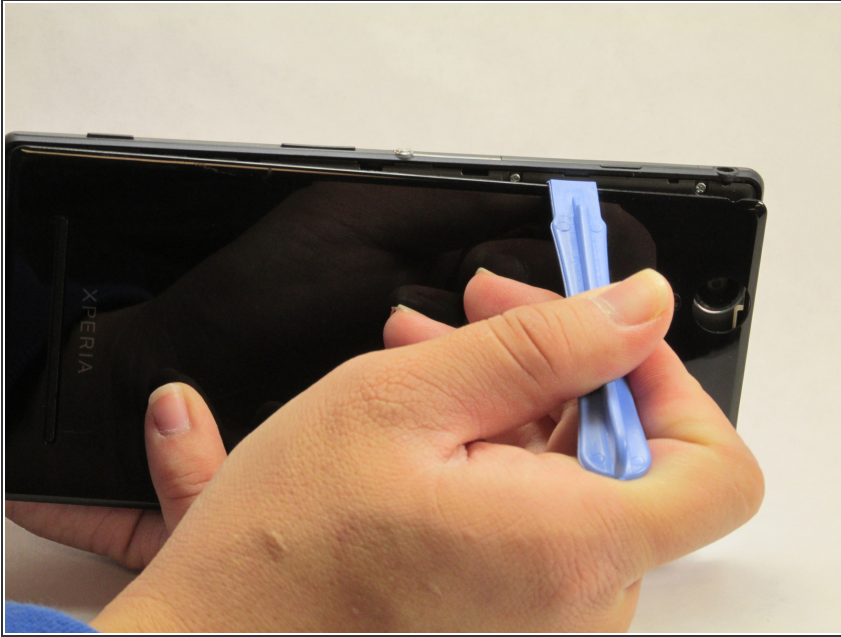


- Using the spudger, pry open the back cover by starting alongside the edge of the back cover.

Step 2

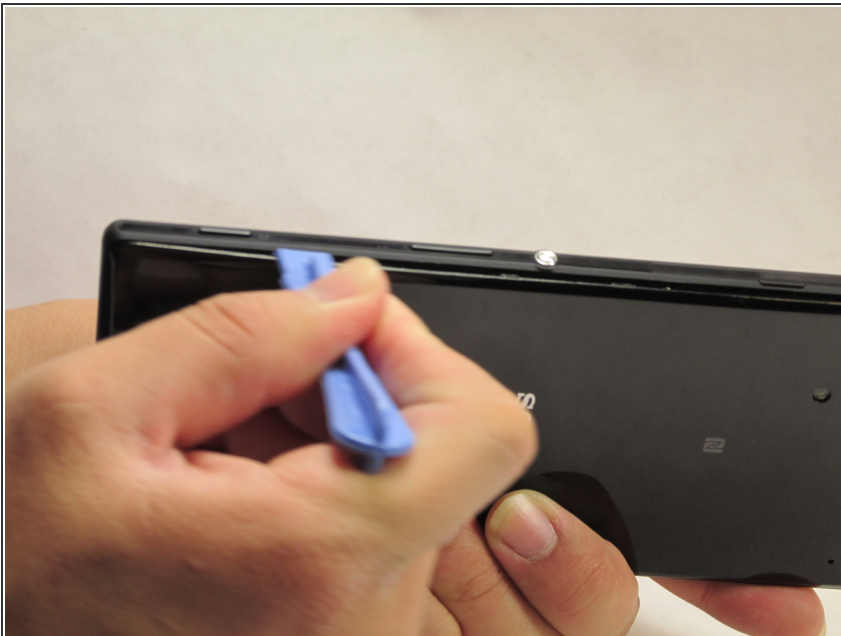


- Once the part of the back cover has been opened up. Slide the spudger to pry completely detach the cover from the phone.

Step 3 — Removing the internal cover

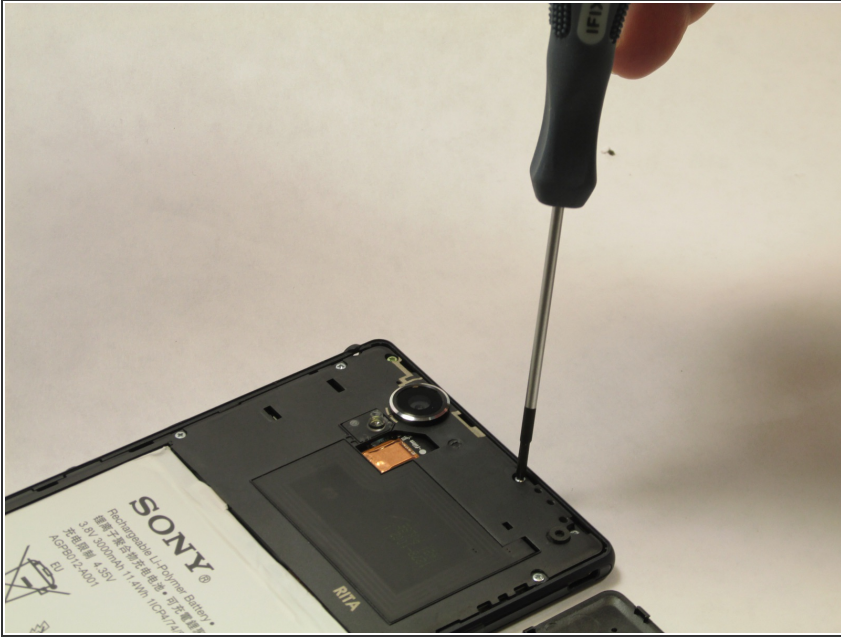


- Using the Phillips #00 Precision screwdriver, take out 8 silver screws (3.15mm) and 5 gold screws (3.9mm) for a total of all the screws attached to the flat plate. 3 of the gold screws are located at the top of the phone and the other 2 screws are located at the bottom of the phone.

Step 4

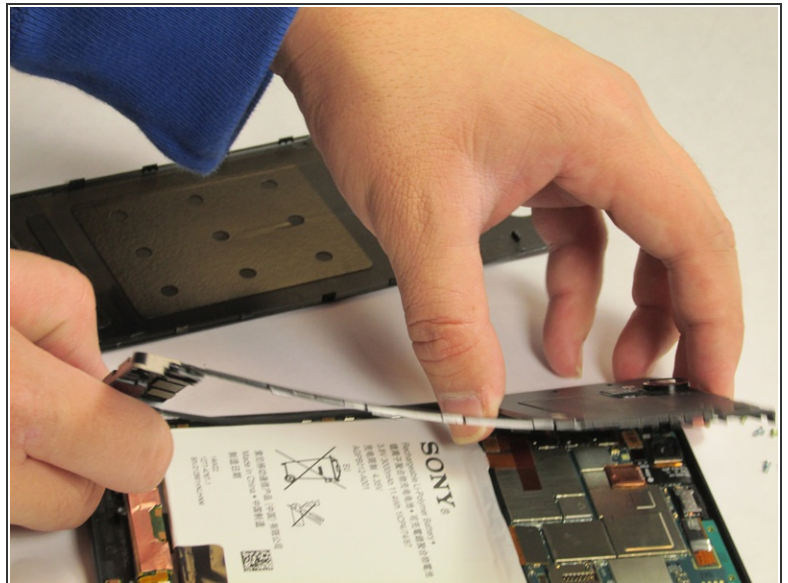


- To remove the internal cover, use the plastic spudger tool and pry the cover from the phone as shown in the picture.

Step 5 — Removing chip

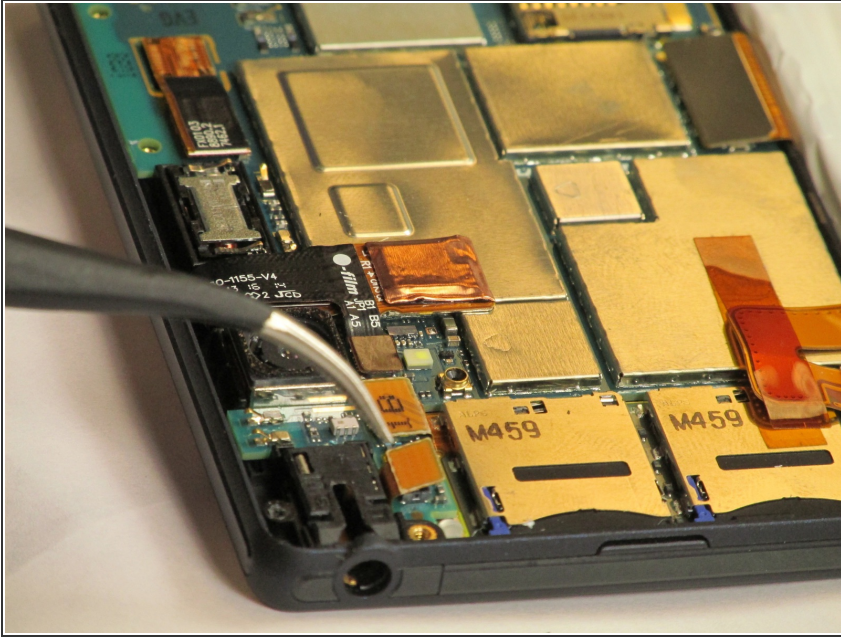

- Using tweezers, locate the audio jack as shown and pull out the chip connected to the motherboard.

Step 6 — Remove audio jack

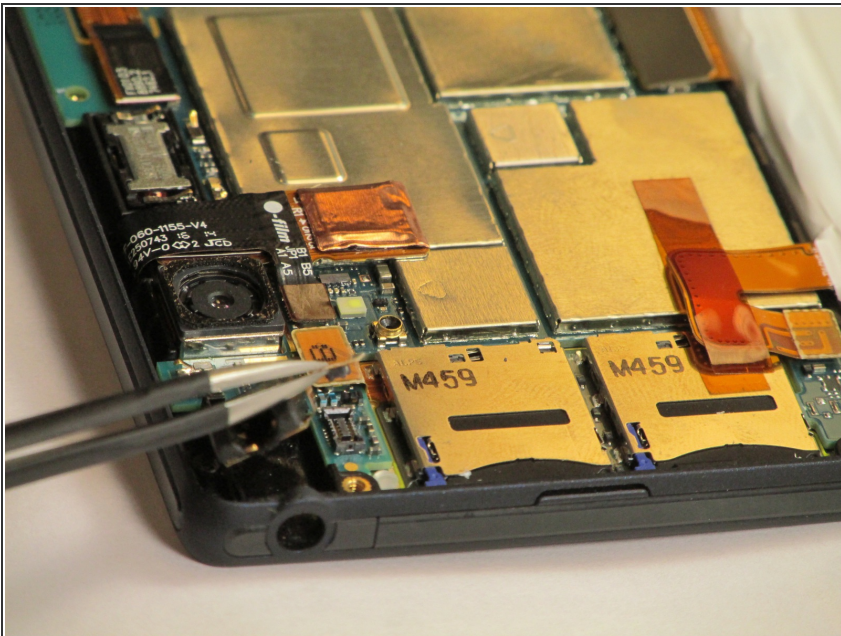

- Carefully remove the audio jack by using the tweezers and pull firmly straight out of the motherboard.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-02 03:44:42 PM.